

European Office

Taylor House • 34 Sherwood Road • Bromsgrove Worcestershire • B60 3DR • England

Tel: 44 (0) 1527 520 999 Fax: 44 (0) 1527 501 999 E-mail: info@sti-emea.com • Web: www.sti-emea.com USA - Headquarters

2306 Airport Road • Waterford, Michigan 48327-1209 Phone: 248-673-9898 • Fax: 248-673-1246

Toll Free: 800-888-4784 • E-mail: info@sti-usa.com

Web: www.sti-usa.com

INSTALLATION OF STI-7523 ENCLOSURE

- 1. Insert the (4) mounting tabs fully into back box mounting tab slots. Use rubber mallet if necessary.
- 2. After selecting a suitable location, place enclosure, in closed position, against the wall. Mark and drill (4) 1/4 in. diameter holes. Insert the (4) 19033 rawl plugs.
- Next fish the (2) magnetic switch wires through the access hole at top of enclosure. (see view A). Close and lock enclosure.
- 4. Place enclosure in position making sure the (2) switch wires are not pinched between the wall and enclosure. Drive in the (4) screws. Enclosure is now secure.

ALARM MOUNTING PLATE

CABINET

OPTIONAL MOUNTING

ROUTE THE 2 SWITCH WIRES


_THROUGH THE HOLE AS SHOWN

6

-HOLES (4)


WIRE ACCESS HOLE

VIEW A

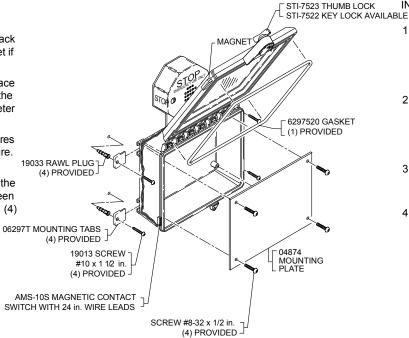


INSTALLATION OF ALARM SYSTEM

- 1. Place the alarm mounting plate on the top center of enclosure. Select at least two of the four optional mounting holes. Mark and drill 3/16 in. holes and install the 19018 rawl plugs.
- 2. Fish the magnetic switch wires through the alarm mounting plate and the siren backplate. Next, drive the two alarm mounting screws into the previous installed anchors.
- 3. Install the two magnetic switch wies following the terminal switch diagram (see View B).
- 4. Install the alarm cover using the two tamperproof screws and provided tool.

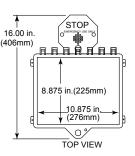



PRODUCT DIMENSIONS STI-7523 THUMB LOCK STI-7522 KEY LOCK AVAILABLE

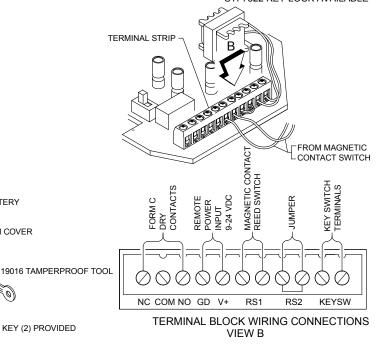

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at www.sti-usa.com/wc14.

INSTALLATION OF STI-7522 & STI-7523 PROTECTIVE CABINET

19018 RAWL PLUG (2) PROVIDED

19039 SCREW x 1 1/4 in.

(2) PROVIDED

19011 SCREW - TAMPERPROOF -

(2) PROVIDED

ALARM MOUNTING PLATE

06202 BACKPLATE

9 VOLT ALKALINE BATTERY

ALARM COVER

19032 KEY (2) PROVIDED

All specifications and information shown were current as of publication and are subject to change without notice.

